

# How to use the Victory Electrostatic Sprayer

1. Don PPE before use (mask, eye pro, gloves).
2. Remove battery from sprayer if already attached.
3. Remove the tank by rotating the tank locking collar to the unlocked position, then pull the tank release ring. (Figure 1). *Note: you must hold onto the tank after you pull the release ring or else it will fall to the ground.*
4. Fill tank with 1 Liter of water (1000mL line on tank). Then, using a syringe, extract 45 mL of cleaning solution and add it to the tank. (Figure 2)
5. Re-attach tank (make sure it “clicks” into place). Rotate locking collar to locked position.
6. Using nozzle wrench, adjust nozzle to desired particle size setting by rotating clockwise until you hear a “click”. The green “8C” setting at 80 microns is recommended. (Figure 3)
7. Insert battery to sprayer and lock in place.
8. Turn electrostatic charge switch on. (Figure 4)
9. Unlock trigger safety. Pull the trigger and spray on your desired surface. **Optimum spray distance is 24 inches.** Allow surface to airdry for a minimum of 10 minutes. (Figure 5)
10. Remove battery from sprayer and place back on charger.



Figure 1



Figure 2



Figure 3



Figure 4

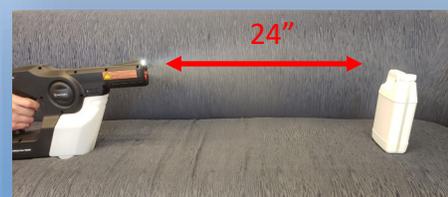


Figure 5

\*After several days of use, clean the sprayer. Remove the tank, empty remaining contents, fill tank with clean water and spray clean water through the unit.

# Additional Information

## Unit Breakdown



## Nozzle Selection Guide

Designation	Spray Pattern	Color Code	Droplet Size (Micron)
4F	Fan		110
8C	Cone		80

## Cleaning Instructions

1. Remove battery from unit.
2. Remove Nozzle.
  - Insert nozzle wrench into the front of the unit.
  - Rotate wench until the tabs on the nozzle line up with the slots in the wench.
  - When the tabs and slots are lined up the wench will be completely inserted into the front end.
  - To remove, rotate the wench in the counter clockwise direction until the nozzle comes loose (1/4 rotation).
  - Remove the wrench when complete.
3. Soak nozzle in hot soapy water and blow out with pressurized air to remove any blockages.
4. Re-insert nozzle. Insert the wrench with nozzle into the front end of the unit. Push in and rotate the wrench 1/4 turn clockwise. When you hear a click the nozzle is in position. Remove wrench.
5. Wipe down exterior of unit with damp towel to remove dirt or debris as needed.